 


Lenco

MDV-2

DVD MICRO HI-FI SYSTEM WITH USB & SD/MMC Instruction Manual

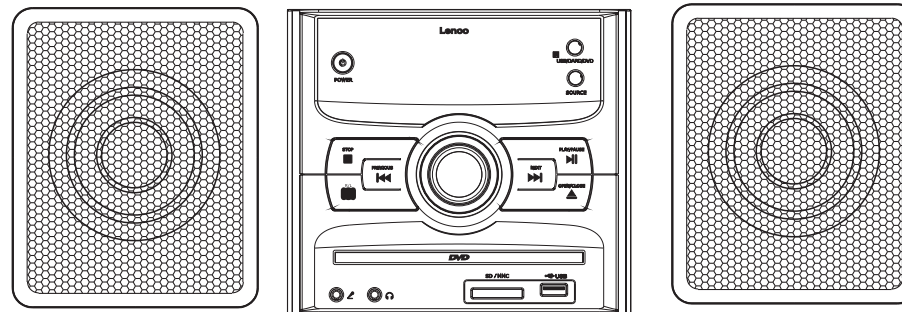

For information and support, www.lenco.eu

TABLE OF CONTENTS

Features3

For your Atteint on.....3

Accessories4

Panel.....5

Remote Control6

Connection..... 7

System Setup.....9

Play.....10

FM SETUP15

Trouble shooting.....15

Specification.....16

FEATURES

Thank you for purchasing our product. Please go through this manual carefully before connection and operation. Please keep this manual for future reference. DVD MINI is a new generation home player which can produce high quality video and audio. Its performance is much better than that of any previous home video playing equipment. As the best signal source of home theatre system , It will give you the uppermost enjoyment!

- Dolby AC-3,MPEG4,DIVX, PCM, MPEG.
- Hi-fi, 96kHz/24bit audio digital processor.
- Software intelligent upgrade
- High-resolution component video output, support future video equipment
- Optical, coaxial digital audio output
- Super compatible with DVD/DVD+RW/DVD-RW/DVD+R/DVD-R/HDCCD/CD/CD-R/MP3.
- Decoding on single-chip technology, high reliability and stability ,and super error correction.
- 2*15W Speaker
- 50 FM preset station
- Support USB, SD/MMC/MS CARD

FOR YOUR ATTENTION

IMPORTANT NOTES:

Please read through the manual carefully before connection and operation.

Do not open the cover or touch any internal components.

Turn off the power when the unit is not being used. (Unplug the power cord if the unit is not used for a long time).

Don't expose this unit to direct sunlight. Keep away from any heating sources.

Don't expose this unit to rain or moisture.

Place the unit on a horizontal level. Keep the unit ventilated. Don't block the heat hole. Overheating may cause malfunction.

Clean the cabinet with soft cloth. Detergent or alcohol is not recommended as it may damage the unit.

This book is only a guide for user's operation.

The apparatus shall not be exposed to dripping or splashing and that no object filled with liquids, such as vases, shall be placed on the apparatus.



The lightning flash is intended to alert the user to the presence of dangerous voltage within the product's enclosure, and touching the internal components may result in a risk of electric shock to persons.



The exclamatory mark is intended to alert the user to the presence of important operating instructions.



To reduce the risk of electric shock or fire, do not open the cover. Refer servicing to qualified service personnel.



This mark indicates this unit belongs to class 1 laser product. The laser beam may produce radiation harm to the directly touching human body.

Accessories

Accessories

User manual



Remote controller



 
Audio/Video cable



FM antenna



Battery




Remote control operation

Insert the batteries into the cell box. The remote control points at remote sensor within 8 metres and within 30 degree at left or right side.


Take the battery out of the controller if it is not used for a long time

 Panel FRONT PANEL

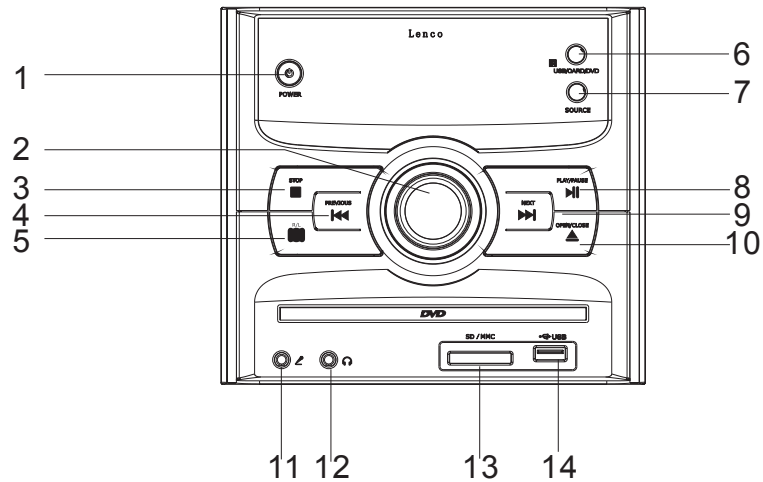

- 1 POWER BUTTON
- 2 VOLUME BUTTON
- 3 STOP BUTTON
- 4 PREV BUTTON
- 5 R/L BUTTON
- 6 USB/CARD/DVD
- 7 SOURCE BUTTON
- 8 PLAY/PAUSE BUTTON
- 9 NEXT BUTTON
- 10 OPEN BUTTON
- 11 MIC SOCKET
- 12 EARPHONE SOCKET
- 13 3IN1 CARD SOCKET
- 14 USB SOCKET

 
REAR PANEL

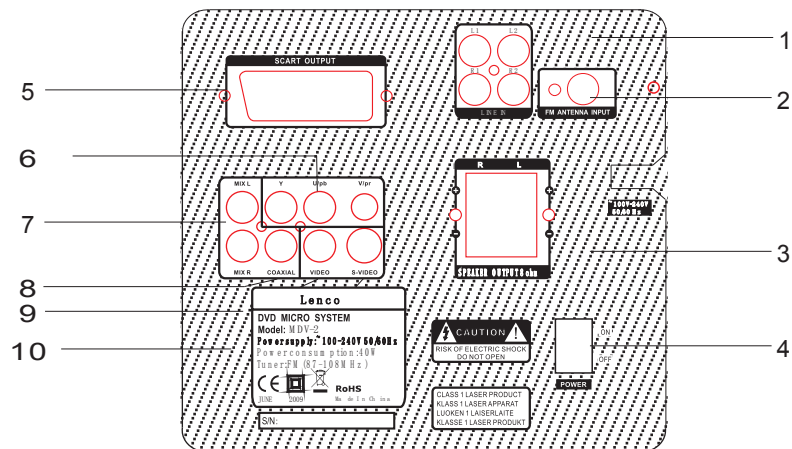

- 1 AUDIO input
- 2 FM antenna input
- 3 Speaker output
- 4 POWER switch
- 5 SCART output
- 6 Component video output
- 7 MIX L/R Audio output

- 8 Coaxial digital audio output
- 9 Composite video output
- 10 S-video output

 REMOTE CONTROL

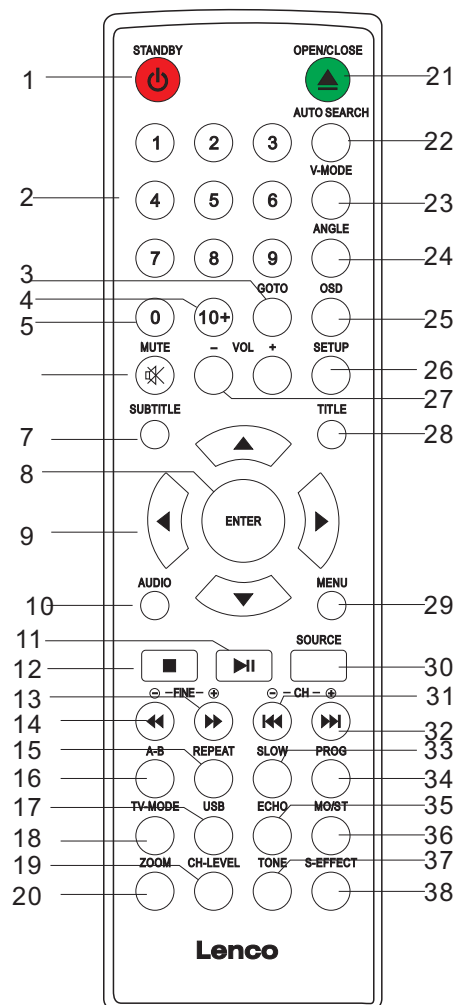

1. STANDBY button
2. Numbered buttons (1-9)
3. GOTO button
4. Double-digit button
5. Numbered buttons (0/10)
6. MUTE button
7. Subtitle button
8. ENTER button
9. Cursor buttons (UP/DOWN/LEFT/RIGHT)
10. AUDIO button
11. PLAY/PAUSE button
12. STOP button
13. F.FWD button
14. REW button
15. REPEAT button
16. A-B button
17. USB button
18. TV-MODE button
19. CH-LEVEL button
20. ZOOM button
21. OPEN/CLOSE button
22. AUTO SEARCH button
23. Video Mode button
24. ANGLE button
25. OSD button
26. SETUP button
27. VOL button
28. TITLE button
29. MENU button
30. SOURCE button
31. PREVIOUS button
32. NEXT button
33. SLOW button
34. PROGRAM button
35. ECHO button
36. MO/ST button
37. TONE button
38. S-EFFECT button

CONNECTION

Video system connection

The following available video output for this unit .

Composite Video

Use the AV cable (yellow terminal) to connect composite video output of this unit to the TV/monitor video input

S-Video

Use the S-video cable to connect the s-video output of this unit to the TV/monitor S-video input

Component Video (YUV)


Use 3 -core AV cable to connect the component output terminals of this unit to the corresponding TV/monitor input

SCART

Use a 21_pin SCART cable to connect the SCART output to the TV/monitor SCART input terminal.

Notes:

 Which connection depends on the TV/monitor input terminal. Don't use the all connections at one time, otherwise the picture will be affected. Only the physical connection conforms to the video setting can produce the normal picture

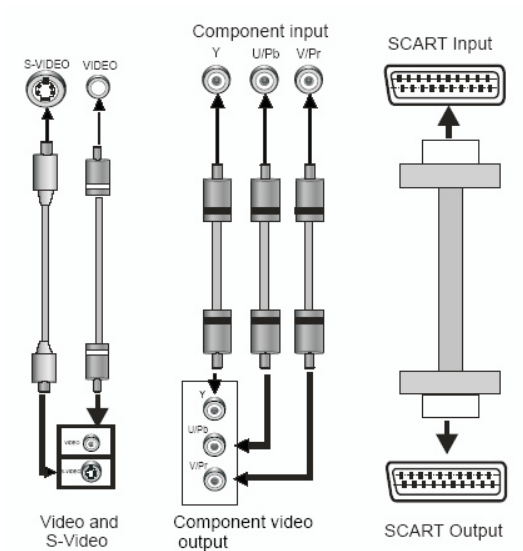

(reference to the **Video Setup** in **System Setup**).

Audio connection system

Two types of audio output systems: analog audio and digital audio. Analog audio includes 2-channel stereo output. Digital audio includes coaxial output.

Stereo Audio Output

Use a pair of RCA cable (red for right /white for left) to connect the stereo audio output of this unit to the TV or a stereo input of power amplifier.

 
Coaxial Digital Audio

Use the special coaxial cable to connect the coaxial output of this unit to the coaxial input of power amplifier.

LINE in

There are 2 line input, This unit has extra group of audio input terminals. You can input the analog stereo audio signals from extra devices as DVD, VCD, CD, VCR player, etc. Use the audio cable (red for right, white for left) to connect the stereo audio output terminals of an extra device to the stereo input terminals (LINE IN) of this unit.

Its corresponding signal source is LINE, which can be available by pressing SOURCE SELECT button.

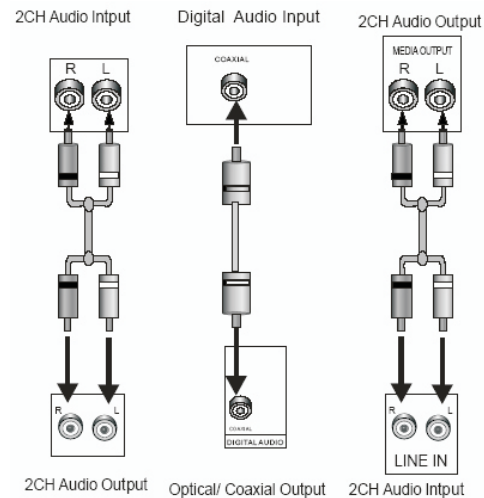

Notes:

The physical connection should accord to the audio output setup of this unit. Please refer to **Audio Setup** in **System Setup**.

SYSTEM SETUP

MENU OPERATION:

Press the SETUP key for the screen to show the setup page. In setup mode, press SETUP key again to quit the setup page. Press direction key to the desired item, press ENTER to confirm.

(1) Some setup items are concerning the present modes. The items in gray can't be set up.

(2) The setup is memorized and will be kept after the power has been turned off.

GENERAL SETUP PAGE

TV Display

Normal/PS: When the unit connects to the 4:3 TV set, the wide-screen image shows on the full screen, but some part is cut off.

Normal/LB: When the unit connects to the 4:3 TV set, the

wide-screen image shows and black bars appear on the top and bottom of screen.

Wide: Use this item when the unit is connected with the wide-screen TV set.

ANGLE MARK

It will show the ANGLE mark when playing DVD disc with multi-angle view if selection is ON (if supported by DVD).

OSD LANG

Select on-screen display language.

CAPTIONS

This function doesn't work when the disc is without captions. If the caption is OFF, press SUBTITLE key on the remote controller to turn the captions on. The default setup is CAPTION ON.

SCREEN SAVER

If the SCREEN SAVER is set ON and the unit is switched on without

a disc playing for several minutes, a moving picture appears on the screen and the unit will go to standby mode after 20 minutes. You can press the STANDBY key on the remote control to activate.

HDCD

You can select the digital filter at 44.1Khz or 88.2Khz and off.

LAST MEMORY

When this function is on, the unit can memorize the time elapsed from the last time you played the disc. Then at the next playing, it will resume playing from the memorized time.

AUDIO SETUP PAGE

Speaker Setup

DOWNMIX

LT/RT:The audio out is Left and Right channel formatting even if the original sound is 5.1CH format.

STEREO :The audio out format is stereo even if the original sound is 5.1CH format.

SPDIF SETUP PAGE

SPDIF OUTPUT

VIDEO SETUP PAGE

S-video:set video output to the S-Video.

YUV: set video output in analog component video format when connecting to Y/U/V terminals.

RGB: set video output in Red/Green/Blue format when connecting to SCART terminals.

The following two items will not be available for some units:

TV MODE

Set video output for Progressive and Interlace,It only be valid in component mode for YUV and RGB.Set YUV for Y,Pb,Pr progressive output when component is YUV set P_RGB progressive output in YUV when component is RGB.

SHARPNESS: There are three optional output modes:HIGH\MEDIUM\LOW.

BRIGHTNESS:Use the [<] or [>] arrow button to move the scroll and adjust the contrast.

CONTRAST:Use the [<] or [>]arrow button to move the scroll and adjust the contrast.

Notes::

If the video setting differs with the physical connection, the TV set may not have picture. In this case, you can RESET the machine, then

SPDIF OFF: no digital signal out(optical or coaxial output off), only analog audio output .

SPDIF/RAW: If this item is selected, setup SPDIF/RAW according to your preference.

Spdif /PCM: In SPDIF/PCM mode, setup PCM digital out according to your preference.

MIC SETUP

Setup Mic to on or off mode, adjust Micphone volume and echo deepness.

DOLBY DIGITAL SETUP

DUAL MONO

Stereo:set audio output to the stereo output.

L-mono:set audio output to the mono-left channel.

R-mono:set audio output to the mono-right channel.

Mix-mono:set audio output to the Mix mono channel.

DYNAMIC

Select this to reduce the overall volume and still keep defined audio sound.

keep pressing key [V-MODE] until the picture returns again.

PREFERENCE PAGE

TV TYPE

This unit is suitable for multiple kinds of TV systems. You can select one of the PAL, NTSC or AUTO.

NTSC: set the output at NTSC system.

PAL: set the output at PAL system.

AUTO: Automatically Set Video format output according to disc content format.

AUDIO, SUBTITLE, DISC MENU LANGUAGE SETUP

These are the initial settings by your preference. If a setting is supported by disc content, it will work. Otherwise the disc default value works. These settings can be changed respectively by pressing key [AUDIO] ,[SUBTITLE] when playing.

PARENTAL

The control level is for parents to control the content and protect children from violence and eroticism. The level of the disc is higher than the setting level and can not be played .










DEFAULT

Reset to the initial factory setups

PASSWORD PAGE

Change the password. The initial factory password is 136900. You can set your own password. If you forget your own password, you can use 136900 as general password.

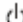PLAY

Symbol	Text	Symbol	Text	Symbol	Text
	OPEN/CLOSE		PLAY/PAUSE		MUTE
	STOP		FAST BACKWARD		FAST FORWARD
	STANDBY		PREVIOUS		NEXT

Basic operation

Open/close



Press OPEN/CLOSE button when power on, the disc tray is pushed out. Put the disc on the tray with the title faced up. Press

OPEN/CLOSE again to close the disc tray and the unit starts playing automatically. (Without auto-play function for mp3 and JPEG discs)

Standby



When playing, press STANDBY button, the machine will be power-off and go to standby state; Press STANDBY again, the machine will be power-on and start playing.

Warning: The power is not fully cut off at the standby state. If the machine will not be used for a long time, turn off the power by pressing the POWER button on the front panel

ECHO



Press this button to adjust the echo deepness and switch on/off echo mode.

TITLE:



When playing DVD disc, press TITLE to return the main title page.

MENU



When playing DVD disc, press MENU once to return to sub-menu. Press MENU again to return to the main menu.

V-MODE



Press V-MODE button to switch the video output mode(YUV-RGB-Video, ect.)

SOURCE



You can switch among various signal sources by pressing SOURCE SELECT button.

SETUP



At DVD mode press the SETUP button, the on-screen setting menu will display on the TV screen.

TV-MODE



Press TV-MODE key to switch to the interlace or progressive scan video output.

AUDIO



When playing DVD with more than one audio stream, press AUDIO to select what you desired.

SUBTITLE



When playing the disc with multi-subtitle, press SUBTITLE continually, the subtitle changes in a circle, you can select one.

ANGLE



When playing the disc with multi-angle, it's convenient to change the view angle.



When playing VCD1.1, CD disc, after loading the disc, use the digit key to select the desired track or chapter directly. Press 10+ key

and then another digit key to select the track which number is 10 or more than 10. You can press digit keys at PROGRAM and MENU selection.

STOP



When playing DVD, VCD, CD disc, press STOP once, the unit will memorize the previous ending point. Press PLAY button to go on the play. Press STOP for the second time to stop the play and end the memory.



When playing the disc, press PLAY/PAUSE once to pause, press PLAY/PAUSE again to return to normal play.

TOPE



Press TONE button to select bass or treble frequency, then press VOL + or - button to change the volume of the selected frequency.

CH-LEVEL

 


Press this button to select a channel then press VOL + or - buttons to adjust its level.

AUTO SEARCH



In tuner mode, press this buttons to scan all the available channels automatically,




Press this button for quick forward search or quick rewind search. In FM mode press F.FWD/REW buttons to fine tune the frequency of the current station.

SLOW



 When playing SVCD, VCD, DVD discs, press SLOW to select slow speed playing.(option)



In FM mode CH PREV/NEXT buttons for manual adjustment of stations with strong signal.

When playing DVD disc, press PREV to the previous chapter.

When playing SVCD, VCD, CD disc, press PREV to the previous track.

When playing DVD disc, press NEXT to the next chapter.

When playing SVCD, CD disc, press NEXT to the next track.

PROGRAM



If the disc is with 2 or more tracks, chapters or titles, set up the playing order as your preference. Press this button to enter program menu. Press digit key to input the number of the track, title or chapter. If the programmed tracks are over ten, press NEXT to go on programming. (Maximum 20 programmable items)

use the up/down/left/right key to move the cursor to the START. Press ENTER to start PROGRAM play.

When playing MP3 disc, NO program function! Press PROGRAM button once to enter DIRECTORY- PLAY mode, you can select program to play in the current directory; Press PROGRAM again to enter FILE-LIST mode, you can select program to play in the file list of whole disc .

MO/ST



In FM mode, Press MO/ST buttons to switch to the STEREO or MONO audio.

USB



Insert the USB or memory card device into the slot on the front panel. Press USB button to select the media, and press the direction button to select, press ENTER button to confirm

S.EFFECT



Press S.EFFECT button to change the surround sound (DSP) effect.

REPEAT



Press REPEAT button to repeat a title, chapter, track or the whole disc.

When playing DVD disc, press REPEAT button continually, the TV screen shows chapter repeat, title repeat, all repeat, repeat cancel in turn

When playing VCD, CD disc, the turn is track repeat, all repeat, repeat cancel.

When playing MP3 disc, the turn is single repeat, directory repeat, repeat cancel.

A-B



When playing DVD, VCD, CD disc, press A-B button to repeat a certain contents.

Press A-B key on the start point (A) and the ending point (B) to select the repeat part.

Press A-B the third time, cancel the A-B repeat and return to normal play.

GOTO



Press GOTO button to select title time, chapter time, track time to play. You can use digit keys input the goto time.

ZOOM



When playing DVD, VCD disc, press ZOOM to zoom in or zoom out the picture. In zoom in mode, press up/down/left/right to move the picture for viewing. The picture can not be moved in zoom out mode.

VOLUME



Press VOLUME + to adjust volume up

Press VOLUME - to adjust volume down

Mute



Press MUTE button, no sound will give out and the mute symbol will display on the TV screen. Press MUTE again, MUTE OFF will display and the sound will resume.

OSD



Press the OSD button, the relative information of the disc will display on the TV screen.

MIC



Insert microphone into mic jack on the front panel. Use the remote control to adjust mic volume to proper value in Karaoke setup of AUDIO SETUP PAGE. Speakers output will be shut on when you speak to mic. Set the echo deepness to proper value in "mic" MENU SETUP of Audio setup or press ECHO key of the remote control.

PLAY PICTURE CD DISC

Press up/down to select the desired picture.

PLAY MP3 DISC

When playing an MP3 disc, There is a menu screen on TV, press the [Δ](up) or [∇](down) button to shift the cursor to select the track or folder, and press the [ENTER] button to play the selected track or folder (it need to enter the sub-folder to select the track and press the [ENTER] button to play for some MP3 discs).

Also use the digit button to select the track (for example:press [4] [5] two digit buttons and then , press the [ENTER] button to play 45th track, it need to enter the folder and select the current folder strack to play MP3).

There are two play mode for MP3 disc: folder and file play, the default mode is the folder play; press [PROG] button to select the mode, In the files play mode, The screen display the total track number and the current playing track, and use the digit button to select the track, or use the [Δ] [∇] button to shift to the track and press the [ENTER] button to play the track.

TROUBLE SHOOTING

Before resorting to maintenance service, please kindly check by yourself with the following chart.

SD/USB:

Insert a USB drive in the USB port, then press USB button to play the readable files in it. Press USB button again to switch to the DVD mode. Insert a SD or a MMC card into the SD/MMC card slot, then press USB button to play readable files in it.

Press USB button again to switch to the DVD mode.

NOTE: If a USB drive and a memory card are inserted at the same time, press USB button once to select USB and press it twice to select memory card. Press it for the third time to return to the DVD mode.

FM SETUP

Press SOURCE buttons to FM mode.

In FM mode press AUTO SEARCH button to scan all the available radio FM station automatically

Press CH+/- buttons to switch to the previous or next FM station.

Press FINE+/- buttons to fine tune the frequency of the current station.

Press MO/ST buttons to switch to the STEREO or MONO audio.

Note: Press AUTO SEARCH key in the remote controller to search all FM station in TUNE work mode,

Or, jump to a preset station manually, then use +/- to fine tune the station, the unit will memorize it automatically.

Symptom	Cause(s)	Solution
No power	● The power cord isn't connected	● Connect the power cord properly
	● Fuse melting	● Replace a same specification fuse! ⚠
No picture	● TV video setup isn't correct	● Select the suitable setup
	● Player video setup isn't correct	● Select the suitable setup
	● Video cable isn't connected well	● Connect the cable properly
No sound	● Audio cable isn't connected well	● Connect the cable properly
	● Source select incorrect	● Switch to the proper source
	● Audio setup isn't correct	● Select the suitable audio setup
Distorted picture	● Dirty disc	● Clean the disc
	● In fast forward or fast rewind mode	● Sometimes, the tiny distortion appears. It's normal
Luminance unsteady or picture with noise	● Anti-copy circuit influence	● Connect the DVD unit to TV directly
Unable to play	● Without disc	● Load the disc
	● Disc is bad	● Clean or replace the disc
	● Disc is put upside down	● Load the disc properly
	● Dirty disc	● Clean the disc
	● There are menu on TV screen	● Use SETUP to turn off menu
	● Parental control is working	● Set up parental off or change the setup
Key malfunction	● Power wave or other static interference.	● Turn on/off the power and try again.
Remote control Doesn't work	● Doesn't work	● Point the remote control at the sensor
	● Remote control is too far from DVD unit	● Operate the remote control within 7m
	● Batteries are weak.	● Replace the batteries
Can't locate any channels in tuner mode	● Antenna is not connected	● Connect antenna
	● Source mode is not in tuner mode	● Switch to tuner mode

Specification

Power supply	AC ~100-240V/50-60Hz
Power consumption	Less than 42W
TV system	PAL/NTSC
Laser wave length	650nm, 780nm
Audio frequency range	DVD: 4Hz~22kHz (48kHz PCM) 4Hz~44kHz (96kHz PCM) CD: 4Hz~20kHz
S/N ratio	≥ 64dB
Audio dynamic range	≥ 90dB
Operating conditions	Temperature: 0~40°C, operation flat, horizontal

FM Specification

Frequency range	87.00M ~ 108.00MHz
STEP Frequency	50k Hz
ANT Input Impedance	75Ω Unbalanced



If at any time in the future you should need to dispose of this product please note that: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)